


So it is more precise to detect





# Control Panel Settings

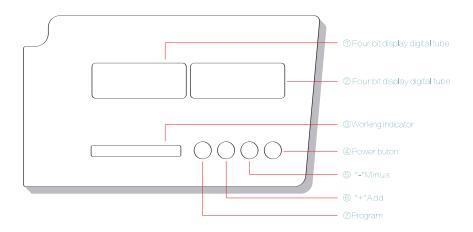

### Starting up

Olik@ Power button-staring up, then@@ display: 0000 0000.

### Input password

Boot and press the program bottom, display P0000, enter the password, the initial password is P0000, press 6 corresponding selection number (from 0 to 9 cycle), press 5 right shift bit digital tube (can cycle shift, choose corresponding bit windle), if password fault, can't enter the system, press 7 to reenter the password, until the correct password, then press 7(program botton) access the interface of setting specification.

### Revising password

Starting up display0000 0000, then keeping pressing 7 (program botton) the screen display P 0000, enter the old password, press the 7 (program botton) to determine, display C---, press 7 (program botton), the screen shows the old password (0000) the initial password is P 0000, then can enter (modified) new password, then press 7 (program botton) save and into the next level Setting.



Product Certification is on Service card back





## Warranty Terms

### Article 1

In order to protect the legitimate rights and interests of consumers, clear and definite manufacturers, distributors, repair business of walk

through metal detector for repairing, replacement, returning (hereinafter referred to as the three package) responsibility, according to <the

product quality law of People's Republic of China >, < Consumer Protection Law of People's Republic of China > and the relevant laws and

regulations, to Constitute this provision.

Walk through metal detection door is to point to consumer buy this kinds device for special security check.

In the territory of People's Republic of China, walk through metal gate's repairing, replacement, returning, shall comply with the

For walk through metal gate ,implement this principle who sell it will be responsible for the three pack. The three package is valid from the

seller issued purchase invoice or the installation is calculated from the date of acceptance (the arrival of the goods a

consumers unilateral factors cannot be installed or invoice, warranty period take effect after one week automatically). The period of validity

of three pack include whole machine, Main component and system quality guarantee period, Quality guarantee

During three package, if product exists problem of quality, consumers can contact the seller in by three package

with the provisions of the replacement, return conditions, consumers with three bags of evidence, repair records,

replacement, return. Beyond the prescribed time limit

### Non three packs of responsibility

In the period of validity of the three pack, the seller, the manufacturer, and the repair merchant can prove that one

circumstances, does not bear the responsibility of the three package, but shall provide reasonable repair

- 1.Beyond the prescribed time limit
- 3. No valid invoices and three packs of certificates
- 4. The product brand, model, code and requirements on invoice or three package are not in conformity with product

After-service	e warranty card	
Customer name	purchasing date	*REMARKS*
Phone	purhcasing ways	
Address		
Product name	Model	
After-service record		







	Funtional selection	I	Spec setti	ing
Ca	Press ⊘ keybo an select circularly at follow functi Function	ving :	6 keyboar	responding functional interface, pressing d and corresponding no "+" Dkeyboard and corresponding no "-"
	Security levelsetting	Н	1~20	20levels can be adjusted
:	Working frequency setting	F	1~50	50levels can be adjusted
	Sensitivity Settings for each zone	L1	1~200 1~200 1~200	1 detector sensitivity 200 level 2 detector sensitivity 200 level 3 detector sensitivity 200 level 4 detector sensitivity 200 level 5 detector sensitivity 200 level :
	Alarm time length setting	d	1~3	Alarm time length 3 levels
	Alarm volume setting	у	0~2	Volume 2 levels
	Alarm tone setting	yd ····	1~10	10 levels
	Infrared setting	R	1~3	3 kings infrared mode(Front IR ON /Back IR ON/ 2 IR ON)



Before revising device specification please read this section carefully.



Note: when enter into next interface, spec value of last interface equal to the last operation value



## Product Introduction

### Prodcut description

Muti-zone intelligent walkthrough metal detector with high performane, in the meantime, it have higher sensitivity、light weight 、best resistance of interference and perfect stability. This model adopts high <sup>1</sup> strength material, more lighter and convenient transportation and installation. With Fully modular product, assembly on flow line production, so can keep the stability of production. It is easy to operate with Intuitive

Muti-zone intelligent walkthrough metal detector is widely used in athletic meeting, conference, school etc. This item is gotten shape patent, and achieve right of software registration. Its defection theory is to use electromagnetic field to detect metal object, and even detect Metal quantity by acousto-optic alarm mode. It consists of the main unit. HF signal generator, infrared sensor, it is most advanced metal detector gate with elegant shape, superior detection ability, muti-zone detection, unique operation network system, portable features.

### Technology advantages

- Adaptive system; when system enters into adaptive mode, it can adapt the testing standard.
- The sensitivity of Each detection zone can be adjusted randomly ( with adaptive technology )
- Query function; the system with real-time information query function.
- Detection ability: at least detect 100 persons within one minute.


### Specification

- Detect object; contraband including mobile phone and metal
- Weight: net weight 44 KG, gross weight 52 KG;
- External size : 2185x855x 470 mm
- Passage size; 2030x700x470(the width of passage can be customs made from 700-1500 mm)
- Packing size: 2265x690x220mm Packing size: 2265
  Volume: 0.344m³

- Passage size; 2030x700x460(the width of passage can be customs made from 700-1500 mm)
  - Packing size; 2295x700x200mm
  - Volume : 0.321m³
  - Working humidity: 99%, non-condensing
  - Working temperature: -40℃-85℃
  - Power supply; can equip with backup battery. Can choose different supply time from 8/16/24/48 hours(optional)
  - Input; AC 110 V-240 V/50HZ-60HZ
  - Output; DC 12 V/5A 12W



## Installation instructions

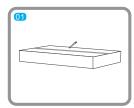


01 Please check whether




02 Take out left and right door panels from door panel




03 Take out the manual, cross

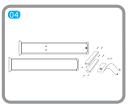


04 Prepare door panel, cross

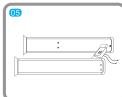

(05) Install cross beam and host diagram, meanwhile tighten

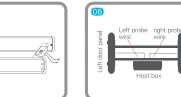

panels together

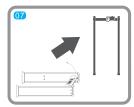

07 Put up the equipment, and finish installation



08 Connect power and device, normally.



Please first read this section before installing device.

If need our technology supporting when installing and operating or setting specification, please call our service hotline. (refer to cover service card )

If have any doubt and advice regarding our product, please send email to our email adress. When we received your email, will reply you immediately. Appreciate your supporting and understanding.









### FAQ deal

NO.	Fault name	Fault description	Check failure	Fault judgment	Maintenance Tools
1	Cannot-boot	Can't benormally used after installation and connect the power.	Check whether the power line between main chassis and the door panels has been plugged in with AC220V power cord.     Check whether the power cord is damaged, broken, poor contact, and the main chassis power supply is normal.	1.Motherboard fault 2.Circuit fault	Visual, Manual operation
2	Boot does not show	The LCD screen does not light Digital board is not bright	Check whether the motherboard connector panel is inserted properly.	Replace connecting line or display and digital board.	Visual, Manual operation
3	No count	The through number shows 0001 or 0000 or even not counting.	We picked up a phone, turn on the camera, the lens on the dot at the door will emit aglowing red dot, which means the infrared emission is normal, if not, the infrared is broken.	Replace the infrared component.	Visual, Manual operation
4	Disorderly alarm	It may appear automatic alarm when there is not staff through the detector.	Check the surroun ding environ ment, ortry to change the frequencies.     When the sunlight direct to the infrared component, it may also appear automatic alarm.	Replace the infrared component.     Change the installation location to avoid the sun.	Visual, Manual operation
5	Omission	There is no alarm when walking through the detector with metal.	Normally it is because the sensitivity is too low, try to increase the sensitivity of eachzone.	Debugging capturecard.	Visual, Manual operation

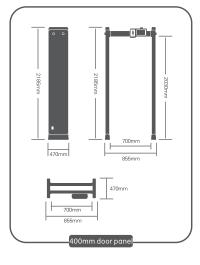

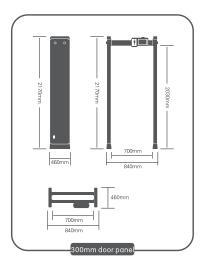

### Application occasions

Walkthrough metal detector is used to detect metal object in the body. Typical application occasions as following:

- Airport, port, travelling check point
- Court, visting checking point
  Conference, stadium, access control
- power plant , factory hotel, restaurant, entertainment, power venue, KTV

By research and practice of long terms, we published this style device. And it also is use advanced technology and 100% security. According to the manual operating, will not exist any damage for the person passing








### Installation environment

### Shaking Ground

Ground should be flat, with a solid support, to prevent vibration. Especially when there is presence of vibration of the metal structure under the surface, people walk through the detector may cause unnecessary alarms.

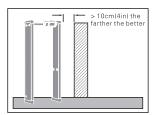


### Fixed the metal objects

The distance between fixed or a large metal object should be at least 10cm (4in) away from the WTMD to detect large metals. It has little effect on the sensitivity, but it may make WTMD more susceptible to vibration.



The distance of this section is recommend distance, the actual distance should be decided upon the installation site conditions.

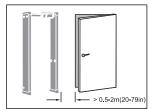

### The moving metal objects

The moving metal objects outside the WTMD should keep a distance of 0.5-2m (20-79in) away from the door, thus to avoid false alarms. According to the size of metal objects, the distance between metal objects and the WTMD may be different.



### Radiated electrical interference

The distance between electronic interference source and the receiving coll is the largest. The recommended minimum distance should be 0.5-4m (20-157in). However, the actual distance should be depended on the real conditions. For example, you can move the WTMD and the interference source to find the best position.


Interference may be provided by electronic control panel, radios and computers, image display, high-power motors and transformers, AC cord, thyristor control circuits, flash welding equipment fluorescent tubes and other equipment.



Please first read this section before installing device.

### Conductivity electronic interference

Connect the power cord to which is not connected to other large load (such as high-power motors, etc). They may result in a large power line or voltage shocks.

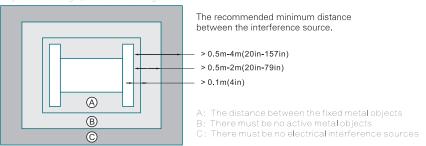

### Multiple devices work side by side

Work side by side is to point to mutiple devices work close to each other. When work side by side, Walk through metal detector will interfere each other in a certain extent. Interference level is decided the distance between the devices, working frequency, sensitivity.

There is many different working frequencys choosen for walk through metal detector, so can reduce the interference between device in order to work side by side. Please note, when work side by side all device should set different working frequency.

### Before working, device setting

Operator passes through walk through metal detector with need to be detected metal. In the meantime adjust sensitivity and security level, so that achieve customer's demands(note:factory standarder is that one yuan coin transversely pass and will exist alarm)



