



Detection Zones Diagram of walkthrough metal detector


“

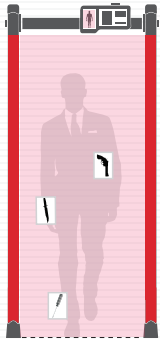


Single zone

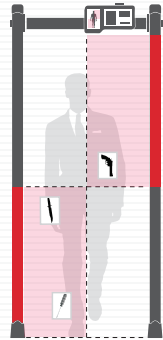


Three-dimensional
4 zones

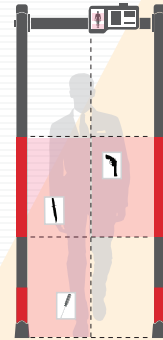


Erect 4 zones

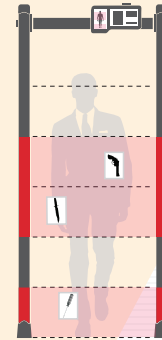


6 zones

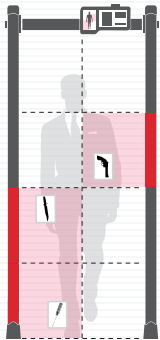


Three-dimensional
8 zones

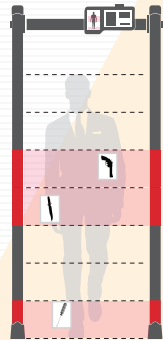


Erect 8 zones

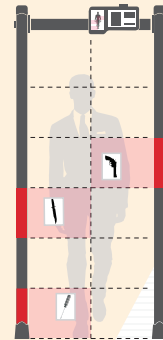


12 zones

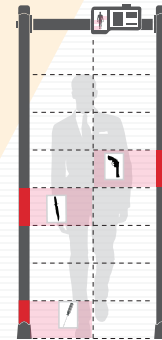


16 zones

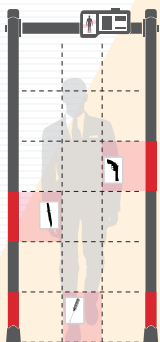


18 zones

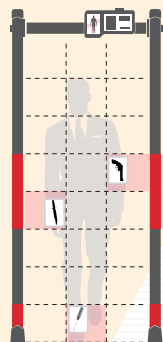

24 zones

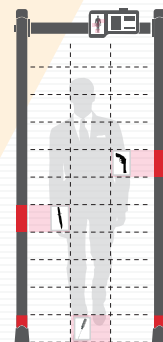

33 zones

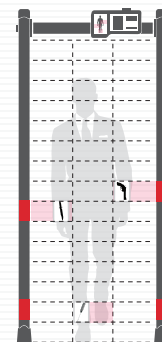


45 zones

**Note: mutple zones will alarm at the same time when detecting metal object.
So it is more precise to detect**

”



Muti-zone intelligent walk through metal detector

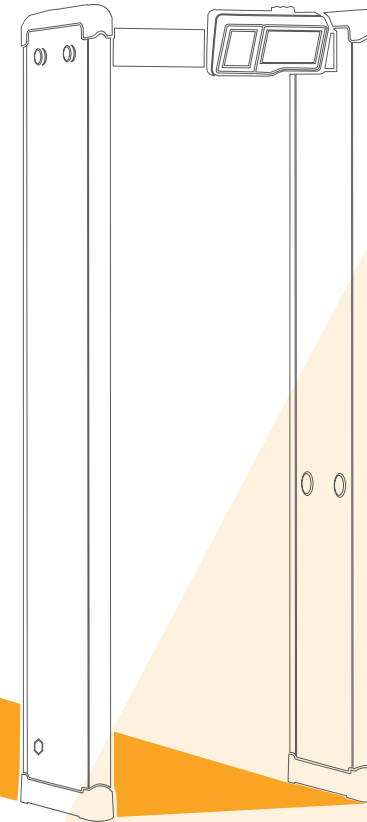


INSTALLATION AND OPERATION MANUAL


English Version
VIME 20-17-I

 SERVICE CARD





Control Panel Settings

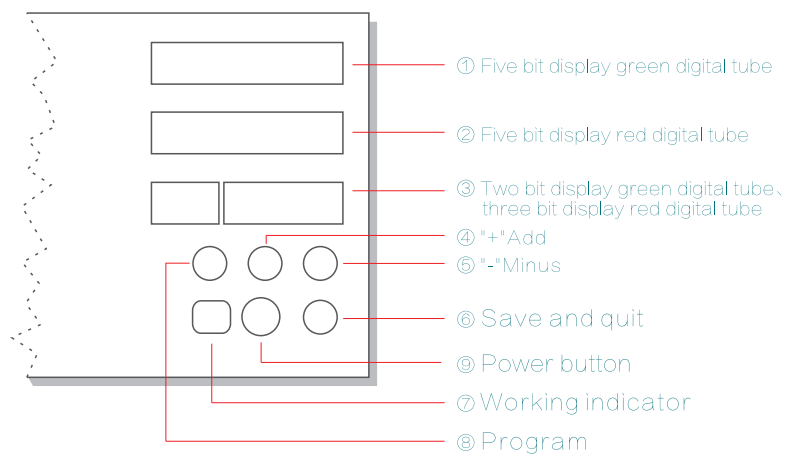

Starting up

Click ⑨ Power button -starting up, then ③display: p 0000.

Self checking of system

When starting up, start self checking for 12 detector. If not irregular working, then will prompt error information (please refer to fault code)

When starting up, start self checking for infrared sensors. If not irregular working, then will prompt error information: LR ERR (please refer to fault code)


When starting up, start self checking for SD card. If not irregular working, then will prompt error information: sd ERR (please refer to fault code)

Input password

Input password, initial password is p 0000. ④ corresponding selection number (from 0 to 9 cycle). ⑤ right shift bit digital tube (can cyclic shift, choose corresponding bit twinkling), if password fault, will reminding: ERR. Press ⑨ (program button), Reenter password until password is correct, then press ⑨ (program button) access the interface of setting specification.

Revising password

If need to revise password, press ⑨ (program button) Switch to screen display C 0000, then keeping pressing ⑨ (program button) about 5s. At present start to twinkle at corresponding position. ④button choose corresponding number (from 0 to 9 cycle). ⑤right shift digital button (can cycle shift, choose corresponding twinkling position) inputting new password. Pressing ⑨ (program button) enter into next level setting.

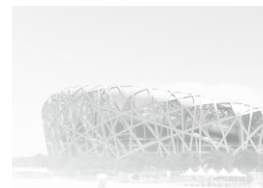

Product Certification is
on Service card back





Warranty Terms

Article 1

In order to protect the legitimate rights and interests of consumers, clear and definite manufacturers, distributors, repair business of walk through metal detector for repairing, replacement, returning (hereinafter referred to as the three package) responsibility, according to <the product quality law of People's Republic of China >, < Consumer Protection Law of People's Republic of China > and the relevant laws and regulations, to constitute this provision.

Article 2

Walk through metal detection door is to point to consumer buy this kinds device for special security check.

Article 3

In the territory of People's Republic of China ,walk through metal gate' s repairing, replacement, returning, shall comply with the provisions of this.

For walk through metal gate ,implement this principle who sell it will be responsible for the three pack.The three package is valid from the seller issued purchase invoice or the installation is calculated from the date of acceptance (the arrival of the goods a week because consumers unilateral factors cannot be installed or invoice, warranty period take effect after one week automatically).The period of validity of three pack include whole machine,Main component and system quality guarantee period, Quality guarantee period of quick-wear part and other parts. During three package , if product exists problem of quality, consumers can contact the seller in by three package certification.accordance with the provisions of the replacement, return conditions, consumers with three bags of evidence, repair records, purchase invoices for replacement, return. Beyond the prescribed time limit

Non three packs of responsibility

In the period of validity of the three pack, the seller, the manufacturer, and the repair merchant can prove that one of the following circumstances, does not bear the responsibility of the three package, but shall provide reasonable repair

- 1.Beyond the prescribed time limit
- 2.Transfer to other users
- 3.No valid invoices and three packs of certificates
- 4.The product brand, model, code and requirements on invoice or three package are not in conformity with product required

After-service warranty card

Customer name _____ purchasing date _____

Phone _____ purchasing ways _____

Address _____

Product name _____ Model _____

After-service record _____

After-service record _____

After-service record _____

After-service record _____


REMARKS



RECYCLE ©Planned products,contaminating and mixed



Function Setting

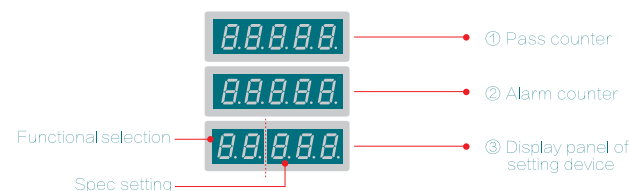

Before revising device specification,please read this section carefully.



Note: when enter into next interface, spec value of last interface equal to the last operation value

Functional selection

Spec setting

6/12/18 ZONE

Press @ keyboard
Can select circularly at following functions

Function	Code
Working frequency setting	F 1~50
Security level setting	H 0~99
Partition setting	FL 6/12/18
Left each zone sensitivity setting	1L 0~399
	2L 0~399
	3L 0~399
	4L 0~399
	5L 0~399
Right each zone sensitivity setting	1R 0~399
	2R 0~399
	3R 0~399
	4R 0~399
	5R 0~399
Alarm volume setting	yL 0~99
Alarm tone setting	yd 0~99
Alarm time length setting	yc 0~99
Scene setting	CJ 1~72
LED lights display setting	Ld LD 0 (Default)
battery level	dc 0~100
automatic frequency adjustment	CF 1~50
Infrared setting	LR
Revise password	C0 * * *

Under corresponding functional interface, pressing @ keyboard and corresponding no "+"
Pressing @ keyboard and corresponding no "-"

50 levels can be adjusted
100 levels can be adjusted
Three kinds detection zones conversion
1 detector sensitivity 400 level
2 detector sensitivity 400 level
3 detector sensitivity 400 level
4 detector sensitivity 400 level
5 detector sensitivity 400 level
:
1 detector sensitivity 400 level
2 detector sensitivity 400 level
3 detector sensitivity 400 level
4 detector sensitivity 400 level
5 detector sensitivity 400 level
:
Volume 100 levels
100 levels
Alarm time length 100 levels
72 scenes option(changing security level, each zone sensitivity mode)
When left and right panel are installed wrong (when detecting metal object , left and right panel alarm lights will display in the opposite side) changing the value into 1
Indicate the battery level
Choose suitable working frequency automatically
4 kinds infrared mode (infrared mode IR 1ON/IR 2ON/IR ON/IR OFF is to test mode) 0: double infrared both close 1: only front infrared open, 2: only back infrared open, 3: double infrared both open
Revise password(refer to first page of manual)



1ZONE

Press Ⓢ keyboard
Can select circularly at following functions

Function	Code	
Working frequency setting	F	1~50 50 levels can be adjusted
Security level setting	H	0~99 100 levels can be adjusted
Partition setting	FL	1 Three kinds detection zones conversion
Alarm volume setting	yL	0~99 Volume 100 levels
Alarm tone setting	yd	0~99 100 levels
Alarm time length setting	yc	0~99 Alarm time length 100 levels
Scene setting	CJ	1~72 72 scenes option(changing security level, each zone sensitivity mode)
LED lights display setting	Ld	Ld 0 (Default) When left and right panel are installed wrong (when detecting metal object , left and right panel alarm lights will display in the opposite side) changing the value into 1
battery level	dc	0~100 Indicate the battery level
automatic frequency adjustment	CF	1~50 Choose suitable working frequency automatically
Infrared setting	LR	4 kinds infrared mode (infrared mode IR 1ON/IR 2ON/IR ON/IR OFF is to test mode) 0: double infrared both close; 1: only front infrared open; 2: only back infrared open; 3: double infrared both open
Revise password	C0	* * *

Under corresponding functional interface, pressing
④ keyboard and corresponding no "+"
Pressing Ⓢ keyboard and corresponding no "-"

2/4 ZONE

Press Ⓢ keyboard
Can select circularly at following functions

Function	Code	
Working frequency setting	F	1~50 50 levels can be adjusted
Security level setting	H	0~99 100 levels can be adjusted
Partition setting	FL	2/4 Three kinds detection zones conversion
Left each zone sensitivity setting	1L	0~399 1detector sensitivity 400 level
	2L	0~399 2 detector sensitivity 400 level
	3L	0~399 3 detector sensitivity 400 level
	4L	0~399 4 detector sensitivity 400 level
Right each zone sensitivity setting	1R	0~399 1detector sensitivity 400 level
	2R	0~399 2 detector sensitivity 400 level
	3R	0~399 3 detector sensitivity 400 level
	4R	0~399 4 detector sensitivity 400 level
Alarm volume setting	yL	0~99 Volume 100 levels
Alarm tone setting	yd	0~99 100 levels
Alarm time length setting	yc	0~99 Alarm time length 100 levels
Scene setting	CJ	1~72 72 scenes option(changing security level, each zone sensitivity mode)
LED lights display setting	Ld	Ld 0 (Default) When left and right panel are installed wrong (when detecting metal object , left and right panel alarm lights will display in the opposite side) changing the value into 1
battery level	dc	0~100 Indicate the battery level
automatic frequency adjustment	CF	1~50 Choose suitable working frequency automatically
Infrared setting	LR	4 kinds infrared mode (infrared mode IR 1ON/IR 2ON/IR ON/IR OFF is to test mode) 0: double infrared both close; 1: only front infrared open; 2: only back infrared open; 3: double infrared both open
Revise password	C0	* * *

Under corresponding functional interface, pressing
④ keyboard and corresponding no "+"
Pressing Ⓢ keyboard and corresponding no "-"

Multiple devices work side by side


Work side by side is to point to multiple devices work close to each other. When work side by side, Walk through metal detector will interfere each other in a certain extent. Interference level is decided the distance between the devices, working frequency, sensitivity.

There is many different working frequency choosen for walk through metal detector, so can reduce the interference between device in order to work side by side. Please note, when work side by side, all device should set different working frequency.


Before working, device setting

Operator passes through walk through metal detector with need to be detected metal. In the meantime adjust sensitivity and security level, so that achieve customer's demands (note: factory standarder is that one yuan coin transversely pass and will exist alarm)


Installation instructions

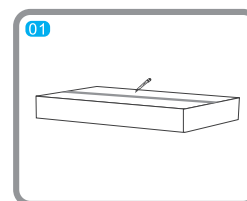


01 Please check whether packing is ok

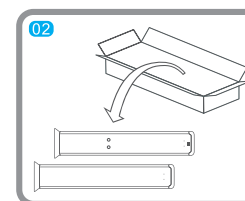


02 Take out left and right door panels from door panel carton

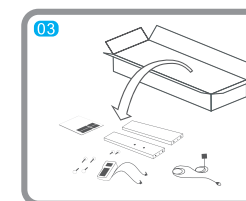


03 Take out the manual, cross beam, host box, power wire from main unit carton

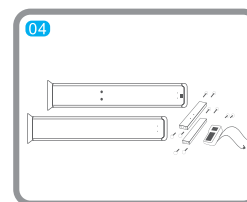


04 Prepare door panel, cross beam, host box, screws according to above diagram

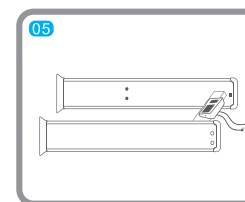


05 Install cross beam and host box according to above diagram, meanwhile tighten screws

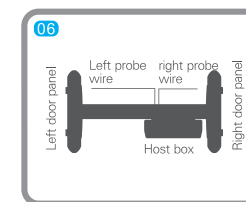

06 Connect the detection wire of host box and both sides panels together

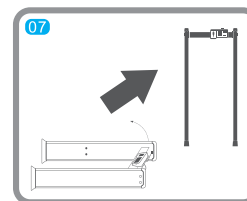

07 Put up the equipment, and finish installation

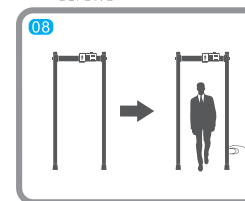

08 Connect power and device, then open starting up button, so device can work normally.



Please first read this section before installing device.

If need our technology supporting when installing and operating or setting specification, please call our service hotline. (refer to cover service card)

If have any doubt and advice regarding our product, please send email to our email address. When we received your email, will reply you immediately. Appreciate your supporting and understanding.



Product Introduction

Product description

Muti-zone intelligent walkthrough metal detector with high performance, in the meantime, it has higher sensitivity, light weight, best resistance of interference and perfect stability. This model adopts high strength material, more lighter and convenient transportation and installation. With Fully modular product, assembly on flow line production, so can keep the stability of production. It is easy to operate with intuitive interface. So can operate without any training.

Muti-zone intelligent walkthrough metal detector is widely used in athletic meeting, conference, school etc. This item is gotten shape patent, and achieve right of software registration. Its detection theory is to use electromagnetic field to detect metal object, and even detect Metal quantity by acousto-optic alarm mode. It consists of the main unit, HF signal generator, infrared sensor. It is most advanced metal detector gate with elegant shape, superior detection ability, muti-zone detection, unique operation network system, portable features.

Technology advantages

- Adaptive system: when system enters into adaptive mode, it can adapt the testing standard
- The sensitivity of Each detection zone can be adjusted randomly (with adaptive technology)
- Can Change the detection zones (customer oneself can convert detection zones easily)
- For Sound, Light alarm, alarm tone, alarm time length, can be change randomly.
- Query function: the system with real-time information query function.
- Detection ability: at least detect 100 persons within one minute.

Specification



- Detect object: contraband including mobile phone and metal
- Weight: net weight 45 KG, gross weight 52 KG;
- External size: 2200x930x480 mm
- Passage size: 2000x750x480 (the width of passage can be customs made from 700-1500 mm)
- Packing size: 2265x695x240mm
- Volume: 0.378m³
- Weight: net weight 40 KG, gross weight 45 KG;
- External size: 2200x920x440 mm
- Passage size: 2000x750x440 (the width of passage can be customs made from 700-1500 mm)
- Packing size: 2270x640x230mm
- Volume: 0.334m³
- Working humidity: 99%, non-condensing
- Working temperature: -40°C~85°C
- Power supply: can equip with backup battery. Can choose different supply time from 8/16/24/48 hours (optional)
- Input: AC 110V-240V/50HZ-60HZ
- Output: DC 12V/5A 12W

Application occasions

Walkthrough metal detector is used to detect metal object in the body. Typical application occasions as following:

- Airport, port, travelling check point
- Court, visiting checking point
- Conference, stadium, access control
- power plant, factory hotel, restaurant, entertainment, power venue, KTV

By research and practice of long terms, we published this style device. And it also is use advanced technology and 100% security. According to the manual operating, will not exist any damage for the person passing through device.

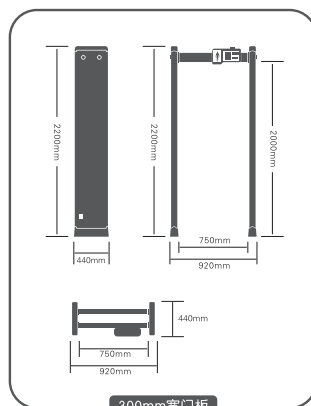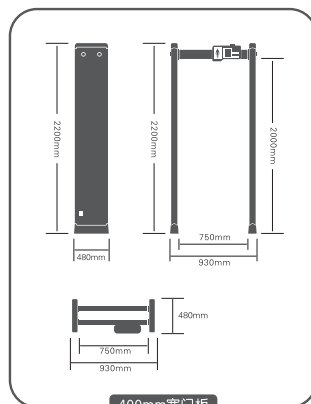

4/8 ZONE

Press ⑥ keyboard
Can select circularly at following functions

Function	Code
Working frequency setting	F --- 1~50
Security level setting	H --- 0~99
Partition setting	FL --- 4/8
Left each zone sensitivity setting	1L --- 0~399 2L --- 0~399 3L --- 0~399 4L --- 0~399 5L --- 0~399 ⋮
Right each zone sensitivity setting	1R --- 0~399 2R --- 0~399 3R --- 0~399 4R --- 0~399 5R --- 0~399 ⋮
Alarm volume setting	yL --- 0~99
Alarm tone setting	yd --- 0~99
Alarm time length setting	yc --- 0~99
Scene setting	CJ --- 1~72
LED lights display setting	Ld --- Ld 0 (Default)
battery level	dc --- 0~100
automatic frequency adjustment	CF --- 1~50
Infrared setting	LR ---
Revise password	C0 --- *

Under corresponding functional interface, pressing
④ keyboard and corresponding no "+"
Pressing ⑤ keyboard and corresponding no "-"

50 levels can be adjusted
100 levels can be adjusted
Three kinds detection zones conversion
1 detector sensitivity 400 level
2 detector sensitivity 400 level
3 detector sensitivity 400 level
4 detector sensitivity 400 level
5 detector sensitivity 400 level
⋮
1 detector sensitivity 400 level
2 detector sensitivity 400 level
3 detector sensitivity 400 level
4 detector sensitivity 400 level
5 detector sensitivity 400 level
⋮
Volume 100 levels
100 levels
Alarm time length 100 levels
72 scenes option (changing security level, each zone sensitivity mode)
When left and right panel are installed wrong (when detecting metal object, left and right panel alarm lights will display in the opposite side) changing the value into 1
Indicate the battery level
Choose suitable working frequency automatically
4 kinds infrared mode (infrared mode IR 1ON/IR 2ON/IR ON/IR OFF is to test mode) 0: double infrared both close; 1: only front infrared open; 2: only back infrared open; 3: double infrared both open
Revise password (refer to first page of manual)

Corresponding scene number query (CJ)

1-Court	19-R&D center	37-Lodge	55-Detox
2-Jail	20-Archives	38-Reception room	56-Examination room
3-Procuratorate	21-Museum	39-VIP room	57-Court of Justice
4-Customs	22-Confidential room	40-Office building	58-Food factory
5-Border defence	23-Gymnasium	41-Aid station	59-Bank
6-Government building	24-Meeting place	42-Club house	60-Exchequer
7-Airport	25-Ceremony	43-Library	61-Exhibition center
8-HSR station	26-Entertainment venue	44-Radio and television	62-Subway station
9-Train station	27-Performance venues	45-Hospital	63-Villa
10-Bus station	28-KTV	46-Weather station	64-Community
11-Pier	29-Bar	47-Radar station	65-Opera house
12-Shelter	30-Market	48-Military base	66-Cinema
13-Printing factory	31-Fire fighting	49-Embassy	67-School
14-Hardware factory	32-Magazine	50-Power station	68-Laboratory
15-Electronic factory	33-Jewelry store	51-Hotel	69-Calaboose
16-Precision instrument	34-Electroplating	52-Natatorium	70-Hospice
17-Mining	35-Die casting	53-Public security bureau	71-Art gallery
18-Oil depot	36-Precious metals	54-Complaints Bureau	72-Amusement park





Common Fault Handling

Fault code




① Pass counter

② Alarm counter

③ Fault code display



When Pop error code and cant work normally, please read this section carefully

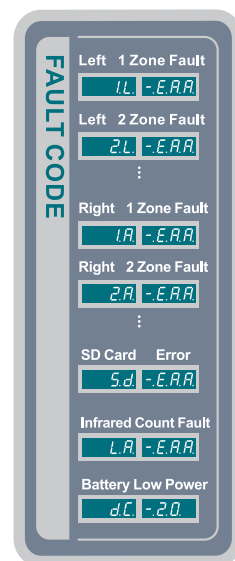

FAQ deal

NO.	Fault name	Fault description	Check failure	Fault judgment	Maintenance Tools
1	Cannot-boot	Can't benormally used after installation and connect the power.	1.Check whether the power line between main chassis and the door panels has been plugged in with AC220V power cord. 2.Check whether the power cord is damaged, broken, poor contact, and the main chassis power supply is normal.	1.Motherboard fault 2.Circuit fault	Visual, Manual operation
2	Boot does not show	The LCD screen does not light Digital board is not bright	Check whether the motherboard connector panel is inserted properly.	Replace connecting line or display and digital board.	Visual, Manual operation
3	No count	The through number shows 0001 or 0000 or even not counting.	We picked up a phone, turn on the camera, the lens on the dot at the door will emit aglowing red dot, which means the infrared emission is normal, if not, the infrared is broken.	Replace the infrared component.	Visual, Manual operation
4	Disorderly alarm	It may appear automatic alarm when there is not staff through the detector.	1. Check the surroun ding environ ment, ortry to change the frequencies. 2. When the sunlight direct to the infrared component, it may also appear automatic alarm.	1. Replace the infrared component. 2.Change the installation location to avoid the sun.	Visual, Manual operation
5	Omission	There is no alarm when walking through the detector with metal.	Normally it is because the sensitivity is too low, try to increase the sensitivity of eachzone.	Debugging capturecard.	Visual, Manual operation




Kind Attention

Installation environment

Shaking Ground

Ground should be flat, with a solid support, to prevent vibration. Especially when there is presence of vibration of the metal structure under the surface, people walk through the detector may cause unnecessary alarms.

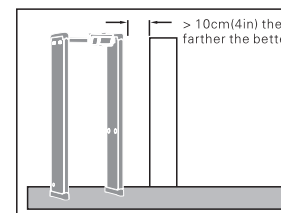


Fixed the metal objects

The distance between fixed or a large metal object should be at least 10cm (4in) away from the WTMD to detect large metals. It has little effect on the sensitivity, but it may make WTMD more susceptible to vibration.




The distance of this section is recommend distance, the actual distance should be decided upon the installation site conditions.

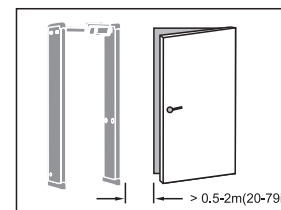

The moving metal objects

The moving metal objects outside the WTMD should keep a distance of 0.5-2m (20-79in) away from the door, thus to avoid false alarms. According to the size of metal objects, the distance between metal objects and the WTMD may be different.

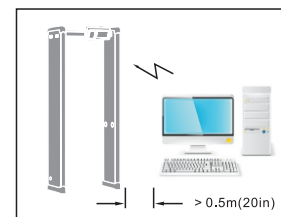


Radiated electrical interference

The distance between electronic interference source and the receiving coil is the largest. The recommended minimum distance should be 0.5-4m (20-157in). However, the actual distance should be depended on the real conditions. For example, you can move the WTMD and the interference source to find the best position.

Interference may be provided by electronic control panel, radios and computers, image display, high-power motors and transformers, AC cord, thyristor control circuits, flash welding equipment fluorescent tubes and other equipment.

Conductivity electronic interference

Connect the power cord to which is not connected to other large load (such as high-power motors, etc). They may result in a large power line or voltage shocks.

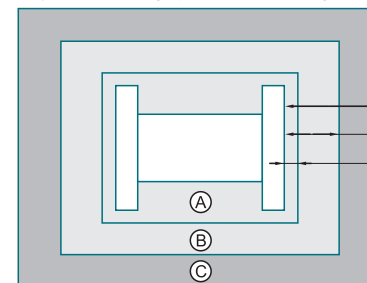

The recommended minimum distance between the interference source.

> 0.5m-4m(20in-157in)

> 0.5m-2m(20in-79in)

> 0.1m(4in)



Please first read this section before installing device.

A: The distance between the fixed metal objects

B: There must be no active metal objects

C: There must be no electrical interference sources